

## 5. Diagnostics Chart with Trouble Code

### A: TROUBLE CODES

#### 1. LIST OF TROUBLE CODES

Trouble code/ Contents of troubles	Memory function	Contents of diagnosis	Index No.
03	Provided.	<ul style="list-style-type: none"> <li>● Front sub sensor harness is faulty.</li> <li>● Front sub sensor is faulty.</li> </ul>	<Ref. to 5-5 [T5B0].>
04	Provided.	<ul style="list-style-type: none"> <li>● Airbag main harness circuit is shorted.</li> <li>● Passenger's airbag module harness circuit is shorted.</li> <li>● Airbag control module is faulty.</li> </ul>	<Ref. to 5-5 [T5C0].>
08	Provided.	<ul style="list-style-type: none"> <li>● Airbag control module is faulty.</li> <li>● Airbag main harness is faulty.</li> </ul>	<Ref. to 5-5 [T5D0].>
09	Provided.	<ul style="list-style-type: none"> <li>● Airbag control module is faulty.</li> <li>● Airbag main harness is faulty.</li> </ul>	<Ref. to 5-5 [T5E0].>
11	Provided.	<ul style="list-style-type: none"> <li>● Airbag control module is faulty.</li> <li>● Airbag main harness circuit is open.</li> <li>● Fuse No. 8 is blown.</li> <li>● Body harness circuit is open.</li> </ul>	<Ref. to 5-5 [T5F0].>
12	Provided.	<ul style="list-style-type: none"> <li>● Airbag main harness circuit is open.</li> <li>● Driver's airbag module harness circuit is open.</li> <li>● Roll connector circuit is open.</li> <li>● Airbag control module is faulty.</li> </ul>	<Ref. to 5-5 [T5G0].>
13	Provided.	<ul style="list-style-type: none"> <li>● Airbag main harness circuit is shorted.</li> <li>● Driver's airbag module harness is shorted.</li> <li>● Roll connector circuit is shorted.</li> <li>● Airbag control module is faulty.</li> </ul>	<Ref. to 5-5 [T5H0].>
14	Not provided.	(AB6), (AB17) and (AB18) are not connected properly to airbag control module.	<Ref. to 5-5 [T5I0].>
15	Provided.	<ul style="list-style-type: none"> <li>● Side airbag sensor (RH) is faulty.</li> <li>● Airbag main harness is faulty.</li> </ul>	<Ref. to 5-5 [T5J0].>
16	Provided.	<ul style="list-style-type: none"> <li>● Side airbag sensor (RH) is faulty.</li> <li>● Side airbag sensor is different.</li> </ul>	<Ref. to 5-5 [T5K0].>
21	Provided.	Airbag control module is faulty.	<Ref. to 5-5 [T5L0].>
22	Provided.	<ul style="list-style-type: none"> <li>● Airbag main harness circuit is open.</li> <li>● Passenger's airbag module harness circuit is open.</li> <li>● Airbag control module is faulty.</li> </ul>	<Ref. to 5-5 [T5M0].>
25	Provided.	<ul style="list-style-type: none"> <li>● Side airbag sensor (LH) is faulty.</li> <li>● Airbag main harness is faulty.</li> </ul>	<Ref. to 5-5 [T5N0].>
26	Provided.	<ul style="list-style-type: none"> <li>● Side airbag sensor (LH) is faulty.</li> <li>● Side airbag sensor is different.</li> </ul>	<Ref. to 5-5 [T5O0].>
31	Not provided.	<ul style="list-style-type: none"> <li>● Airbag control module is faulty.</li> <li>● Airbag main harness circuit is open.</li> <li>● Fuse No. 16 is blown.</li> <li>● Body harness circuit is open.</li> </ul>	<Ref. to 5-5 [T5P0].>
33	Provided.	Front airbag module is inflated.	<Ref. to 5-5 [T5Q0].>
34	Provided.	<ul style="list-style-type: none"> <li>● Passenger's airbag main harness circuit is shorted to power supply.</li> <li>● Passenger's airbag module harness is shorted to power supply.</li> <li>● Airbag control module is faulty.</li> </ul>	<Ref. to 5-5 [T5R0].>